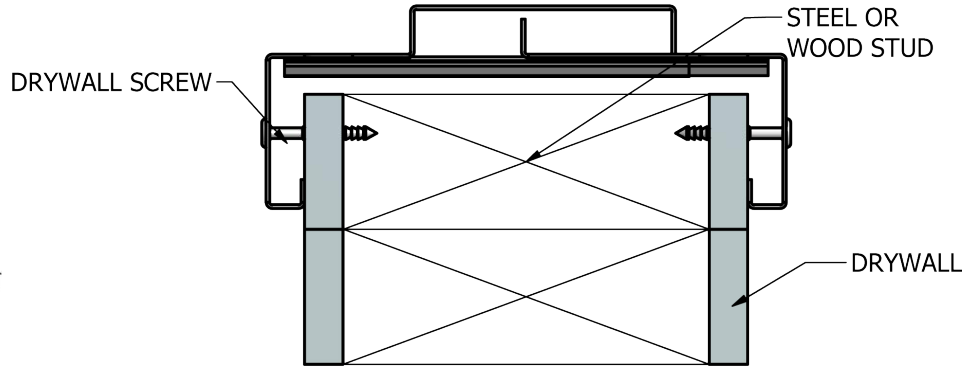
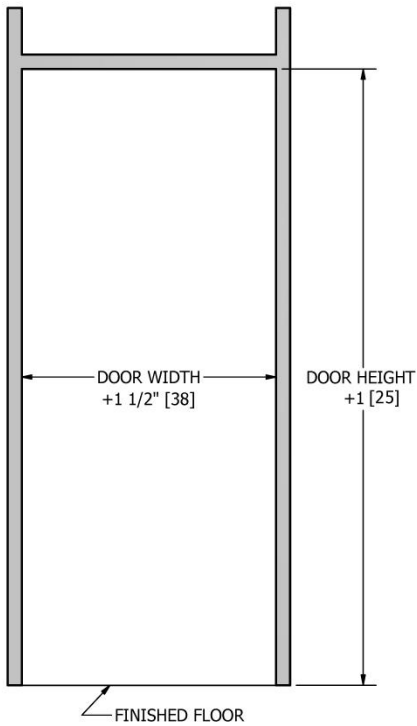

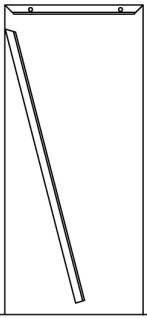
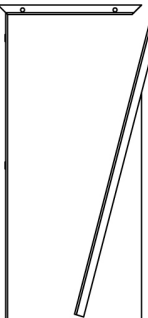
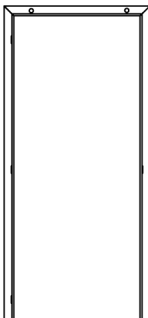
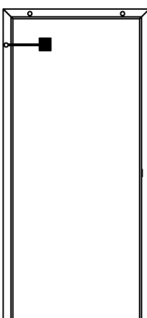


**STUD OPENING DIMENSIONS**



**INSTALLATION DETAILS**

1.  Install header into position.
2.  Install hinge jamb starting at top. Engage corner and slide into position.
3.  Install strike jamb in same manner as hinge jamb.
4.  Adjust frame for proper clearances. Plumb and level.
5.  Screw with #7 x 2 1/2" countersink screws.

