

# THRESHOLD INSTALLATION

## APPLIES TO THE FOLLOWING MDI THRESHOLDS:

TH426: 6" x 1/2" Threshold

TH8475: 7 1/2" x 1/2" Threshold

## Testing/Ratings:




**BHMA**  
CERTIFIED



CLASSIFIED  
UL  
4L10



Category J gaskets for use with listed steel frames and/or classified steel covered composite, hollow metal doors rated up to and including 3 hours; wood and plastic covered composite doors rated up to and including 1-1/2 hours; and wood core doors rated for 20 minutes. (Thresholds may or may not contain gasketing material).

## Tools Required:

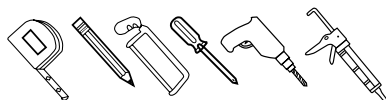

## Installation Instructions:

### Top (plan) view of door opening (out-swing type)

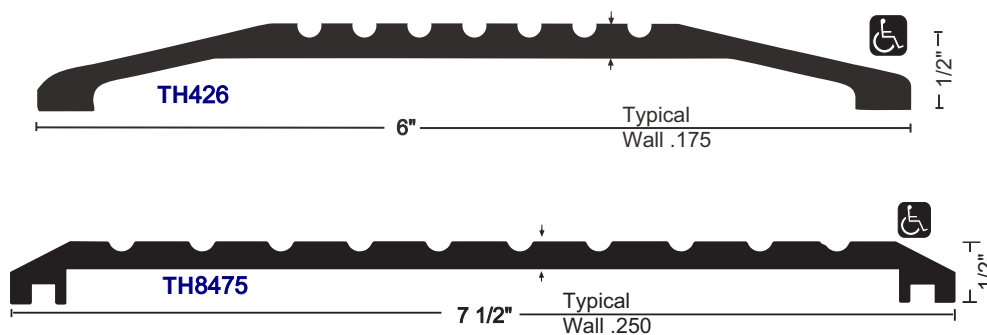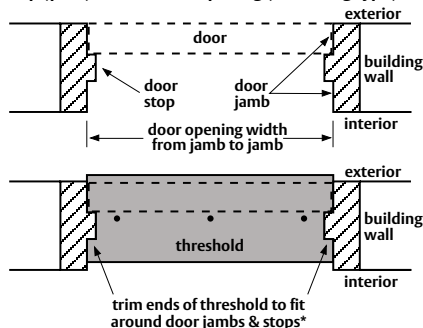

1. Measure width of door opening from jamb to jamb and stop to stop and mark ends of threshold for trimming.
2. Trim ends of threshold to fit around door jambs and stops.
3. Pre-drill holes through threshold where needed. Drill pilot holes in floor through threshold.
4. Caulk ends of threshold and under full length of legs (important for effective sealing and moisture control).
5. Secure threshold to floor with screws. (When fastening to concrete, use anchors; anchors not included.)

**MDI**  
METROPOLITAN DOOR  
INDUSTRIES  
[www.metropolitandoor.com](http://www.metropolitandoor.com)

® MDI and the MDI designed logo are registered trademarks of Metropolitan Door Industries Corp.

### \* NOTES:

1. Thresholds are supplied as straight cut. Cutting and notching is by others.
2. Installation screws/anchors for thresholds are supplied by others.