


## METROPOLITAN HM FRAME ANCHOR DETAILS




DWZ
Metal Stud Drywall
New Construction

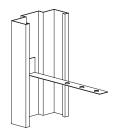


MAS Masonry Strap New Construction




COMBO DWZ & MAS New Construction




TS Tension Screw/Pressure-Fit Standard on Knock-Down




EMA - Bolt-in Existing Masonry w/ Reinf.




EMAO - Bolt-in Existing Masonry No Reinf.




MSZI Metal Stud Drywall New Construction




EON - Bolt-in Existing Masonry w/ Reinf.

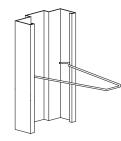


MWA
Masonry Wire Anchor
New Construction

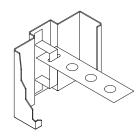

AMA
Adjustable Masonry
Strap - Perforated
New Construction

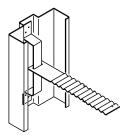


YS
Yoke & Strap Corrugated New
Construction




SA Strap Anchor Wood Stud


## **SPECIAL REQUEST ANCHORS:**




EMAB - Bolt-in
Existing Masonry Anchor
Butterfly Style



**EMAHB**Existing Masonry
Hidden Bolt




MTA
Masonry "T"
New Construction




AA Adjustable Anchor Wood Stud

## FLOOR ANCHORS:



**FA**Floor Anchor
New Construction



**RFA**Reverse Floor Anchor
Existing Construction



**NOTE:** Metropolitan supplies its welded frames with temporary spreaders which are tack-welded to the bottom of each jamb. These spreaders are not to be used for aligning the frame during installation. The sole purpose of the spreaders are to maintain proper alignment during shipment only. Spreaders are to be removed prior to installation.